



EN-408W MANUAL

Model: B3

2019-4



CONTENTS

1. FUNCTION OVERVIEW	1
2. TECHNICAL PARAMETERS	1
3. CONNECTION MODE	2
3.1 PORT INTRODUCTION	2
3.2 CONNECTION DIAGRAM OF CONTROLLER	2
3.3 METHOD OF CONNECTING WITH LIGHTING FIXTURES	3
4. SETTING IP OF THE CONTROLLER	4
5. LIGHTING FIXTURE ADDRESSING	5
5.1 ADDRESSING	5
5.2 SUCCESSFUL ADDRESSING	7
5.3 SUCCESSFUL WRITE PARAMETERS	7
6. IP ADDRESS SETTING (PC)	8
7. ETHERNET SETTING	9

1. FUNCTION OVERVIEW


1. PC online used, controllers can be multi-connected. It support 100,000 pixels(include the useless pixels) in 128 controllers.
2. Power on the controllers, it will address auto when the RGBPlayer play the effects.
3. 8-channel output signal (data-independent), applicable for small, medium and large engineering projects and remote transmission.
4. Control the LED digital tube screen and LED pixel light screen those with variety of regular chips.
Single chip: D**S series, D**J series.
Single-wire: TM180*-400K/800K, UCS19**, UCS29**, TLS3001, SM167**.
DMX512 lighting fixture: SW-D, SW-U, UCS512A/B/C0/C4/D/E, DMX512AP/SM512, SM16500/12, SM17500P/12P/22P, standard DMX512 lighting fixture on the market.
Netants: UCS5603, WS2818, GS8206, P9883, TM1914, XT1506S.
5. It can address the DMX512 lighting fixture.
6. Specialized software of making animation is included, users can make their own effects.

2. TECHNICAL PARAMETERS

Size:	220L×142W×43.6H (mm)
Cover material:	Aluminum alloy
Input voltage:	AC100V - 240V
Input signal:	SW Ethernet Protocol
Output port:	TTL & RS-485 * 8 channels
Pixel quantity drove:	Single chip: 960 points ×8 channels, Single-wire: 1024 points ×8 channels, standard DMX512: 168 points ×8 channels, extensible DMX: 336 points ×8 channels, Netants: 960 points ×8 channels.
Output power:	5W
Working temperature:	-15°C ~ 60°C
Relative humidity:	≤50%
Address mode:	Address auto in "00" (support 128 controllers).
Connecting mode:	Address manual except in "00" (support 99 controllers).
Transmission distance:	Use UTP—unshielded twisted pair cable, distance between the controllers can be 80m. It can be 5km if use the optical fiber if the distance. It only use between PC and the first controller.
IP grade:	IP0 (not dustproof and not waterproof)
Working environment:	Please install under dry indoor condition, avoid any dust, moist and rain.
Weight:	1600g (N.W. 1300g)
Accessories attached:	 ×1 、  ×5

3. CONNECTION MODE


3.1 PORT INTRODUCTION

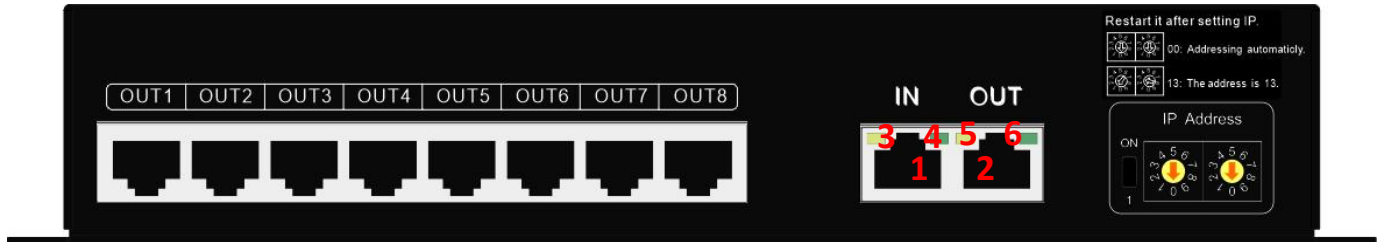


Port/Indicator light	Function Description
1	Cascade signal input port
2	Cascade signal output port
3	IN top-left yellow light
4	IN top-right green light
5	OUT top-left yellow light
6	OUT top-right green light

3.2 CONNECTION DIAGRAM OF CONTROLLER


SCHEME 1: PC + Ethernet Controller

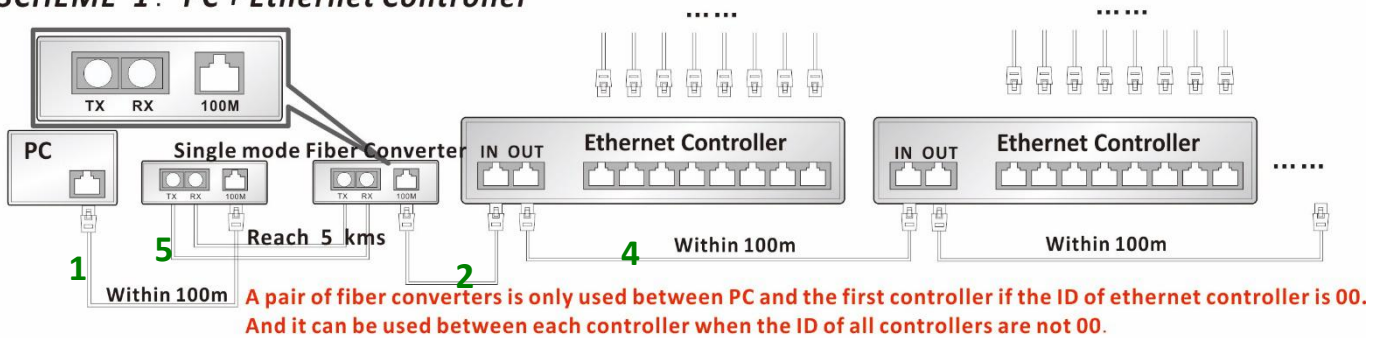

SCHEME 2: SN Controller + Ethernet Controller

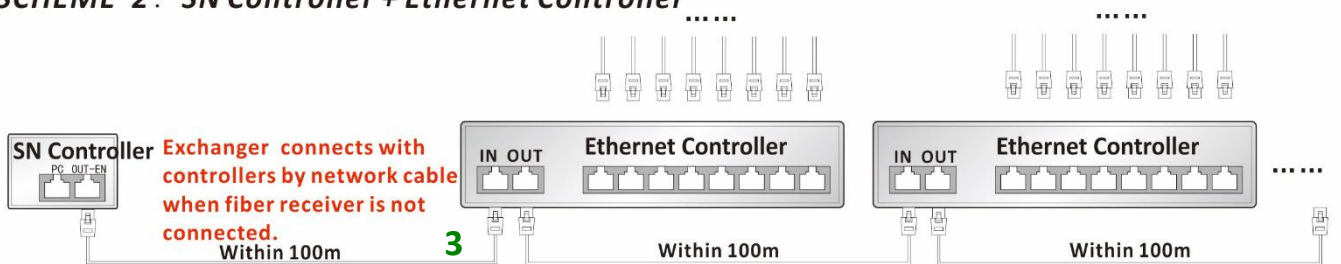


R J 45 cable plug use T568B line sequence

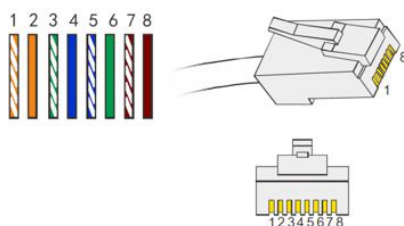

N0.	Material	Standard	Connection Port	Transmission Distance	Connecting Device
1					PC and optical fiber converter
2	Network cable	Unshielded Twisted Paired	RJ45 network cable plug (crystal head) (T568B line sequence)	Within 100m	Optical fiber converter and ethernet controller
3					PC/SN controller and ethernet controller
4					EN controller and ethernet controller
5	Optical fiber	Fiber converter (one pair)	Optical fiber patch cable (SC-SC single mode)	Within 5km	Optical fiber converter and optical fiber converte


3.3 METHOD OF CONNECTING WITH LIGHTING FIXTURES

The circuit should be adjusted in different applications. It is well set in accordance with actual project before delivery. User cannot change the application optionally. Please connect the cables in accordance with silk print on lighting fixture.

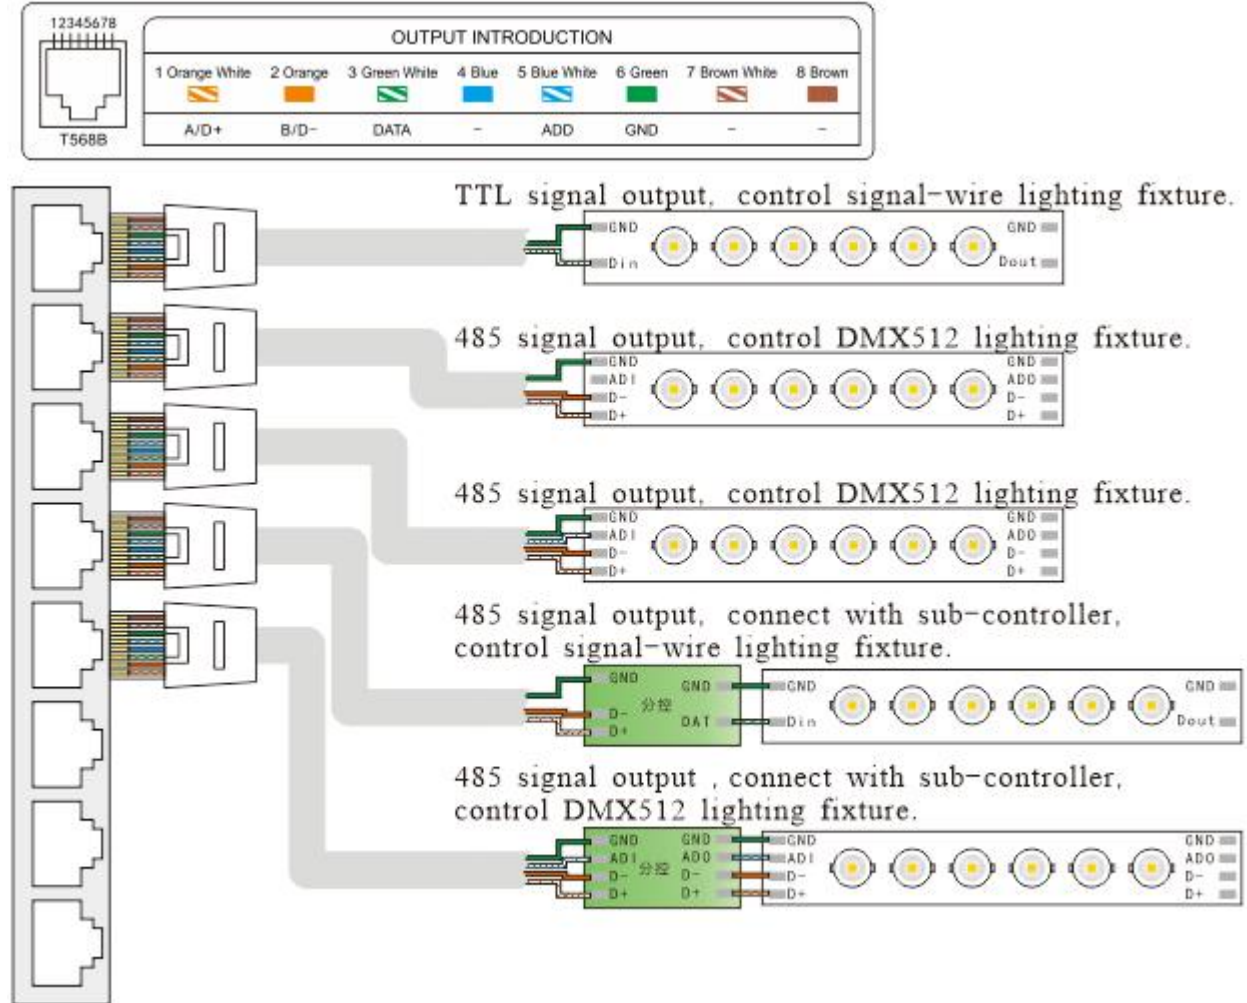

★ Signal cables connection notes:

1. Use UTP—Unshielded Twisted Pair(resistance per 100M<10Ω), low quality Ethernet cables and telephone cable are unavailable.
2. Use one group twisted pair, suggest **green + green white** or **orange + orange white**. The quality and color of the cable are very important. Blue and brown wires greatly influence the signal transmission. Please don't use several groups of twisted pairs together.
3. Controller signal output GND must connect directly with input GND of lighting fixture. **Cannot connect with lighting fixture through power switch.**
4. Switch on the controller after all hardware signal cables and wires are connected. Please *don't CONNECT / DISCONNECT* the signal cables while the controller is power on; avoid bad output by reverse current and protect the circuit and components.

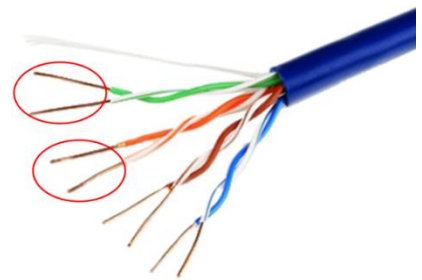

★ Transmission distance:

transmission type	Transmission Signals	transmission media	transmission distance	Notes
Master control-> slave control	RS-485	UTP-Unshielded Twisted pair	50 ~ 100	
Master control/slave control->SW Lighting Fixtures	TTL	UTP-Unshielded Twisted pair	30 ~ 50	
		two core copper wire	5 ~ 30	
Master control/slave control->Other Lighting Fixtures	TTL	UTP-Unshielded Twisted pair	5 ~ 20	
		two core wire	1 ~ 5	
Master control/slave control->DMX Lighting Fixtures	RS-485	UTP-Unshielded Twisted pair	30 ~ 50	The addr wire must be within 5 meter.
		three core wire	1 ~ 20	
		four core wire	1 ~ 20	
SW Lighting Fixtures->SW Lighting Fixtures DMX Lighting Fixtures->DMX Lighting Fixtures	TTL	UTP-Unshielded Twisted pair	5 ~ 20	meters controlled less if over 5 meter
		two core wire	1 ~ 5	
		three core wire	1 ~ 5	
Other Lighting Fixtures->Other Lighting Fixtures	TTL	UTP-Unshielded Twisted pair	1 ~ 2	meters controlled less if over 1 meter
		two core wire	0.1 ~ 1	

4. SETTING IP OF THE CONTROLLER


It is not only addressing automatically, but also addressing manually.

1. It can address automatically when the needles point to "00". The controllers are 1,2,3 in turn.
2. Its IP address is 01 when the needles point to "01".


NOTE: each controller must set the different IP to avoid the data conflict.

Please restart the controllers after the IP be set.

Restart it after setting IP.



00: Addressing automatically.


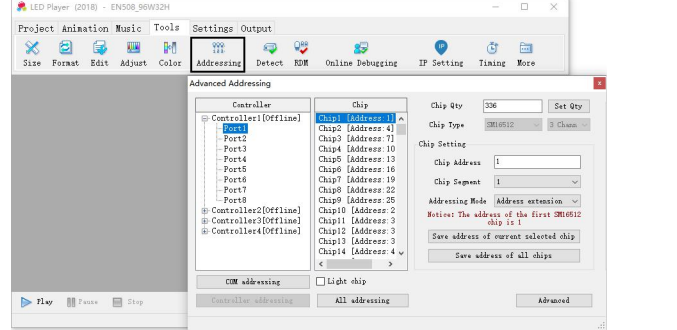
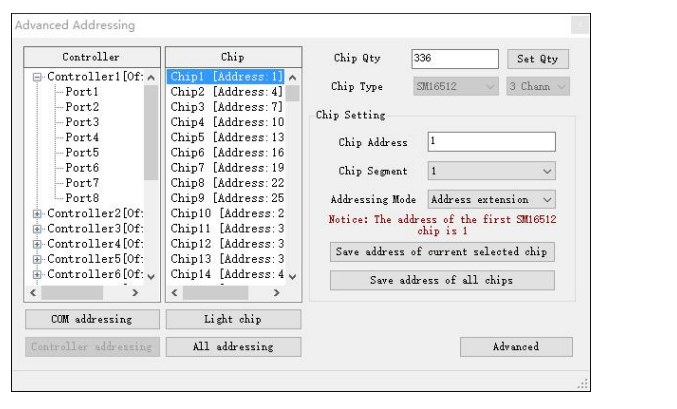
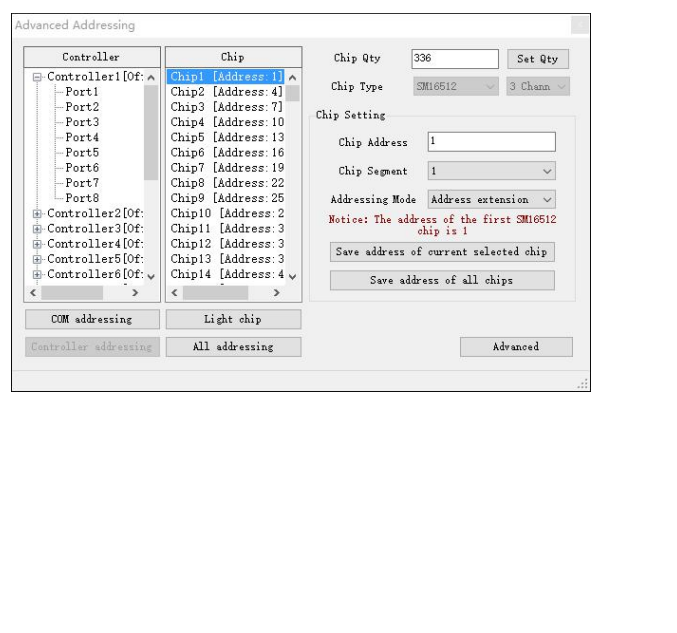






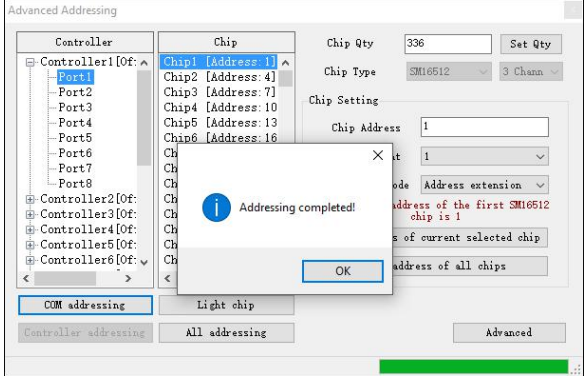
13: The address is 13.

5. LIGHTING FIXTURE ADDRESSING

5.1 ADDRESSING

It can intelligent address the DMX lighting fixtures

<p style="writing-mode: vertical-rl; transform: rotate(180deg);">ENTER-IN ADDRESSING</p>	<p>Click "Addressing" of "Tools" in  RGBPlayer .</p>	
<p style="writing-mode: vertical-rl; transform: rotate(180deg);">THE HARDWARE INFORMATION</p>	<p>Controller: It shows the number of controllers in the project automatically. [Online] is that the controllers connection work. [Offline] is that the controllers connection close. It cannot address the lighting fixture. If the controller output control another lighting fixtures except DMX series, it shows taboo. It can be modified in SETUP. Chip: It shows the number/address of ships.</p>	
<p style="writing-mode: vertical-rl; transform: rotate(180deg);">SETUP THE CHIPS ADDRESSING</p>	<p>Chip Qty: It reads the settingup while first be used. It can be set manually and click Set Qty to save. Chip Type: It reads the settingup while first be used. It can be modified in SETUP. Chip Address: It can be set the address of the select chip, and click Save. Chip Segment: It can be set the pixel of the select chip, and click Save. Addressing Mode: None, Address extension, Use the same address. None It only saves the address of the selected chip. And the others will not be changed. Address Extension It only saves the address of the selected chip. And the others will be extended. Use The Same Address It saves the same address of all chips. Save Address of Current Selected Chip: Click and save the address of the selected chip. Save Address of All Chips: Click and save all chips. The each chips' address will change by the address setting and the segment setting.</p>	
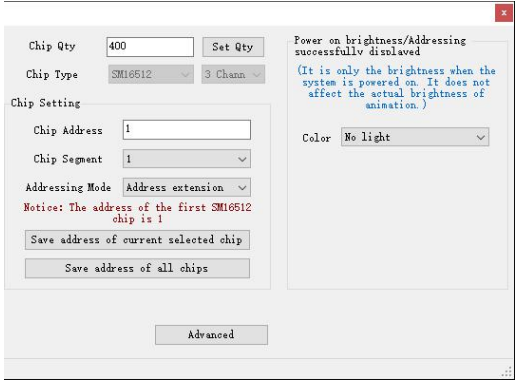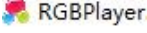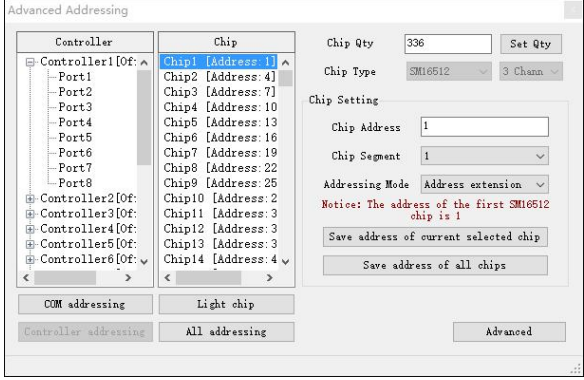
<p style="writing-mode: vertical-rl; transform: rotate(180deg);">SETUP THE CHIPS DATA</p>	<p>Advanced: If the controller output control UCS512C4 or SM16512, It will be set up the Power-on brightness.</p>	
<p style="writing-mode: vertical-rl; transform: rotate(180deg);">ADDRESSING</p>	<p>Com Addressing: It will be used by the selected port. Click it and the lighting fixtures in the selected port will be addressed.</p> <p>Controller Addressing: It will be used by the selected controller. Click it and the lighting fixtures in the selected controller will be addressed.</p> <p>All Addressing: Click it and the all lighting fixtures will be addressed. (The offline controller cannot address.)</p> <p>Light Chip: Click it and light up the selected chip. Please make sure the address of chips in  are same with the lighting fixtures'.</p>	
<p style="writing-mode: vertical-rl; transform: rotate(180deg);">NOTES</p>	<p> shows the progress bar in the lower right corner. It shows "Addressing completed!" when all the EN-508 controller receive the addressing data.</p> <p>It is not the lighting fixtures addressing correct. The addressing successful is according to the light color. UCS512C4 and SM16512 shows the power-on light color after the addressing successful light color.</p>	
<p style="writing-mode: vertical-rl; transform: rotate(180deg);">NOTES</p>	<p>When DMX lighting fixture is addressed successfully, the lighting fixture will be the particular light. When the other color occurs, that means this lighting fixture is addressed unsuccessfully.</p> <p>If fail to set the address, please check connection of the lighting fixture again. Please send the data one more time.</p>	


5.2 SUCCESSFUL ADDRESSING



Note,

1. It would light the random color if the wrong connection.
2. Please use the check function to check the lighting fixture's address.
3. SM1751* only light color for 2 seconds after successful address, namely jump to [power on self-check color].
SM1752* only light color for 4 seconds after successful address, namely jump to [power on self-check color].

5.3 SUCCESSFUL WRITE PARAMETERS

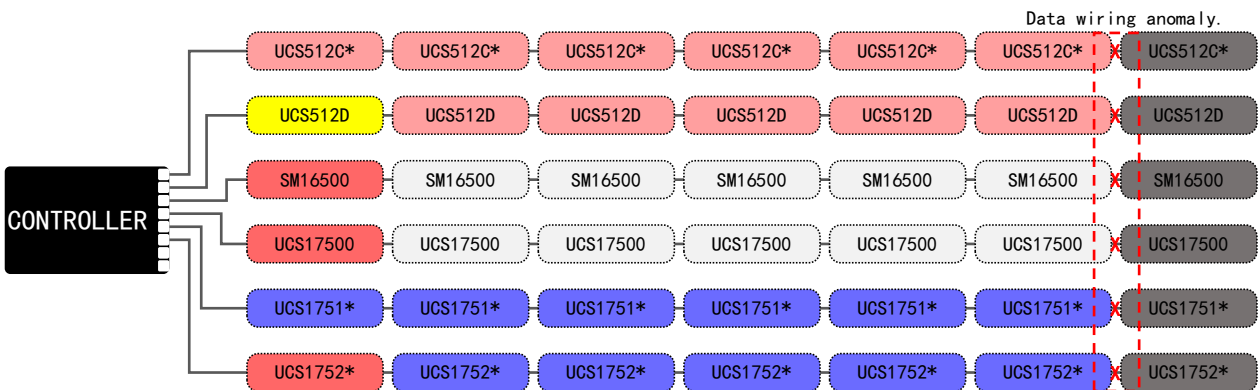


Note,


1. It would light the random color if the wrong connection.
2. SM1751* only light color for 2 seconds after successful write parameters, namely jump to [power on self-check color]. SM1752* only light color for 4 seconds after successful write parameters, namely jump to [power on self-check color].

6. IP ADDRESS SETTING (PC)

1. Open “Network Connection” on the PC, right click “Local Connection” and select “Properties”.

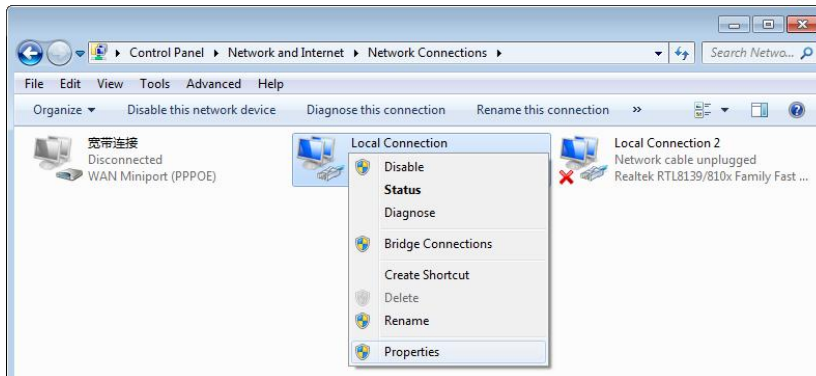


2. Select Internet Protocol (TCP/IP), then click “Properties”. Setting the IP address below.

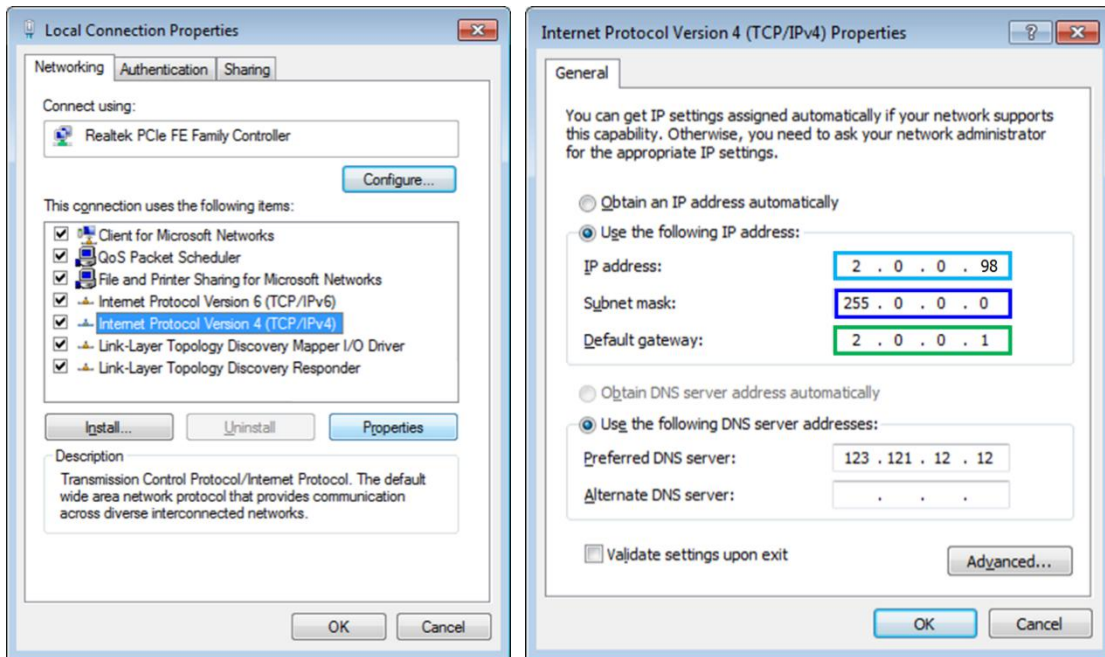

3. Click “OK” after the setting is finished.

7. ETHERNET SETTING


1. Make sure the computer with network card with cable sort. Connect computer to controller via cables. Check the network: computer (right click) – Properties – Device Manager – Network adapters.

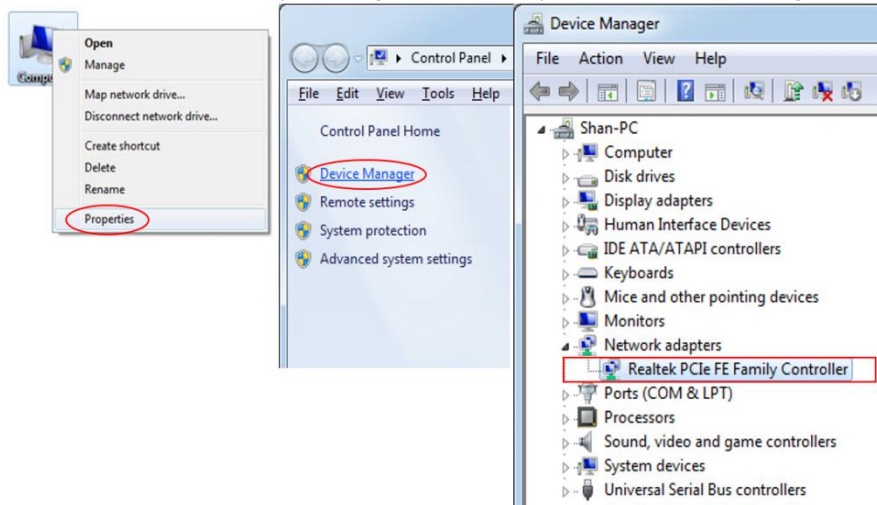

2. Install driver:


If it is the first time to use Ethernet controller, please install driver process

WinPcap_4_1_3_32_64.exe

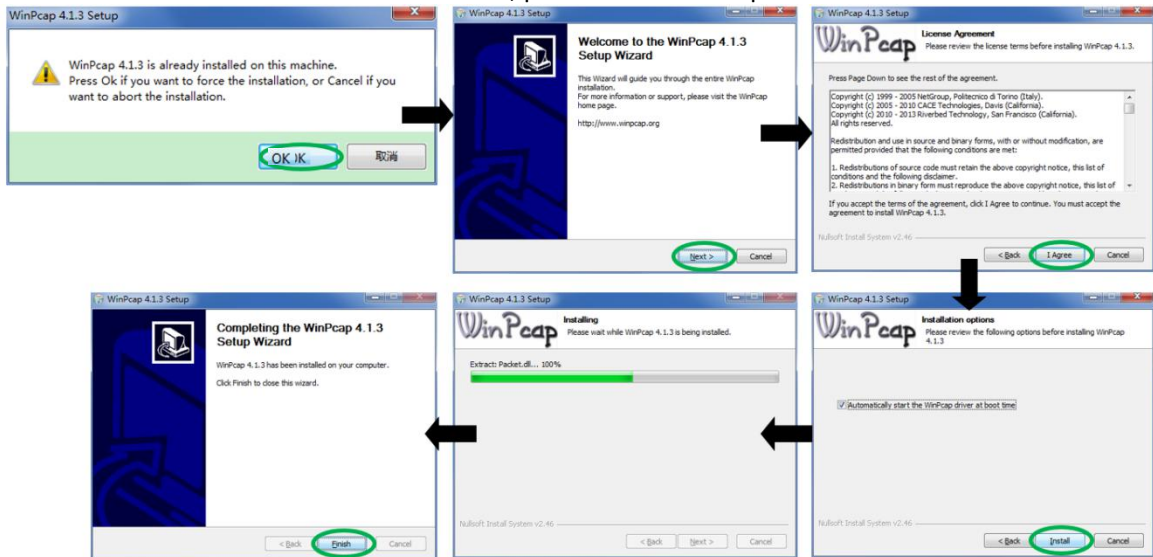

3. Select network card.

Software - Remind frame (if the software doesn't get the network card, this frame will pop.) – Confirm - Ethernet Setting - Single network card (network card set as "Realtek RTL8139/810x Family Fast Ethernet NIC") - Confirm to close.

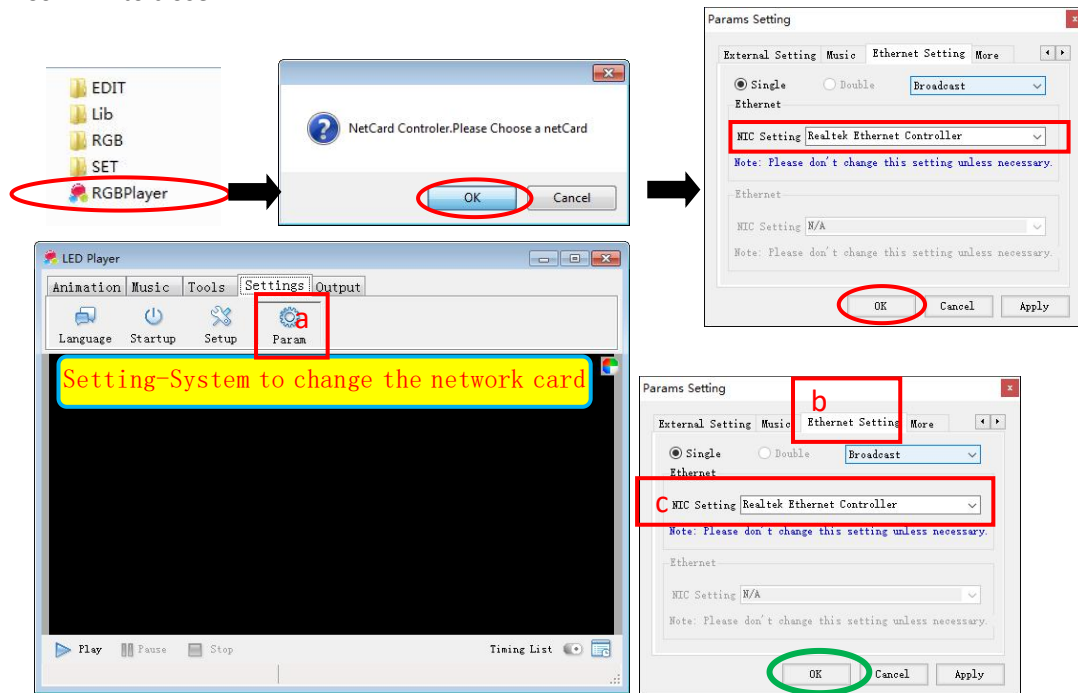

4. Normal using the software. Screen controlled will show effect at any playing mode.